



Earthmoving Machinery Spares Pty Ltd

ABN 78 394 726 341


187 Northcorp Boulevard

Broadmeadows VIC 3047

T 03 8301 9500

F 03 8301 9599

E info@emspares.com.au

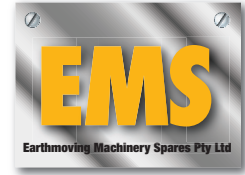

SELECTED REPAIR COMPONENTS D11N/R BULLDOZER

Part Number	Description	Qty	Alt Nos./ Notes
1) ELECTRICAL			
9X7803	ALTERNATOR 24V/100A	1	D11N
6V0513	STARTER MOTOR	1	6V0889, 6T0643
7N0719	SWITCH, DISCONNECT	1	With key 8H5306
9G7641	SWITCH, START	1	Without key 5P8500
9X1439	LAMP A, FLOOD-VERTICAL	4	9X6775
9X3463	LAMP, HALOGEN		
2) ENGINE RELATED			
7W4880	SHIELD, EXHAUST	1	
4P4464	SHEILD, EXHAUST	1	
7W4959	SHIELD, EXHAUST	2	
1W9739	SHIELD, EXHAUST	1	
1W9741	SHIELD, EXHAUST	1	
4P4461	SHIELD, EXHAUST	1	
4P4462	SHIELD, EXHAUST	1	
7W4876	SHIELD, EXHAUST	1	
7W4961	SHIELD, EXHAUST	1	
7S8817	PRECLEANER ASSY	1	
1245142	OIL COOLER, ENGINE	1	4L8606 Gasket (2)
1092332	O-RING	2	
4W5363	CORE, HYDRAULIC OIL COOLER	1	9M8546 Gasket (2)
3) CYLINDER GROUP			
1J2192	BUSHING, ROD	2	Left Cylinder
5J1193	BUSHING, CYLINDER	4	Left Cylinder
1527554	BUSHING, SPHERICAL	4	Tilt Cylinder
9J1175	BUSHING, RIPPER CYLINDER	4	Ripper Lift
3J6484	BUSHING, RIPPER CYLINDER	2	Ripper Tilt
9J5942	BUSHING, CYLINDER MTG	2	Lift Cylinder
4J6888	Locknut, Rod	2	



D11N/R BULLDOZER...CONTINUED

4) BULLDOZER FRAME/ TRUNNIONS/PUSH ARM			
6Y4284	CAP	2	Push Arm Rear
7H3579	BOLT	8	Push Arm Rear
7H7539	NUT 1 1/4" x 14"	8	Push Arm Rear
6Y9512	BALL, TRUNNION	2	
1069036	BEARING, SPHERICAL	2	Trunnion
1J5304	BUSHING	4	Front Push Arm
3G5337	BEARING, SPHERICAL	1	Brace Group
6V3249	BEARING, SPHERICAL	1	Brace Group
9J2364	PIN, BLADE	2	
1224681	CONNECTOR, BLADE	4	
1J5304	BEARING, CONNECTOR	8	
9W2939	PIN, BLADE	4	
6Y5985	PIN, BLADE	4	
9J2593	PIN, BLADE	4	
5) EQUALISER BAR PARTS			
1599311	BEARING, SPH-END	2	
3T7792	PIN, END	2	
9X7510	SEAL, END	4	
1294487	BEARING, CENTRE	2	
8P8827	PIN, CENTRE	1	
8P8797	SEAL, CENTRE	1	
8P8769	SEAL, CENTRE	1	
9W7599	PAD A	2	
9W7800	PAD A	2	
6) SUSPENSION GROUP BOGIE			
7T9311	PIN, BOGIE	16	
9P9993	PLATE, RETAINING	8	
5P9957	RING, RETAINING	8	
1844397	WEAR GUIDE	8	New Style
1873298	WEAR GUIDE	8	New Style
3P2482	PAD A	7	
7T5959	PAD A	1	
9W6723	BOGIE, MINOR	8	D11N
1384142	BOGIE, MINOR	4	D11R
1384151	BOGIE MINOR	4	D11R



D11N/R BULLDOZER...CONTINUED

7) PUMPS			
1644380	PUMP, WATER	1	8N8087, 1220503
1N4478	PUMP, FUEL TRANSFER	1	
2681900	PUMP, FUEL TRANSFER	1	1N4478
6E5294	PUMP, HYDRAULIC GEAR	1	IMPLEMENT
6Y0482	PUMP, HYDRAULIC GEAR	1	D11N
6E3138	PUMP, PISTON	1	D11N
8) TRACK FRAME/PIVOT ASSY			
9W2793	SLEEVE, CANNON	2	D11N
1389907	SLEEVE, CANNON	2	D11R
9X4590	SEAL, ASSY	2	
1J2890	O-RING (8T8096)	4	
3S1223	O-RING (8T7241)	2	
8F9960	O-RING	2	
2H3932	O-RING	6	
8T1115	SEAL, PIVOT SHAFT	2	
2M1309	O-RING	4	
3K0360	O-RING	4	
6F4718	O-RING	4	
8F9960	SEAL (8T8146)	4	
2H3932	O-RING	6	
9) TRACK ADJUSTER/RECOIL			
9W2500	BEARING, SLEEVE	2	
6P7577	RING	4	
8T2863	SEAL, U-CUP	2	
2S8939	RING, RETAINER	2	
4J3342	RING, WEAR	4	
6T9125	RETAINER A	2	
2S5925	FITTING, GREASE	2	
2S5926	VALVE, RELIEF	2	
10) RIPPER			
9J6691	PIN, RIPPER	2	
5J1204	PIN, RIPPER	2	
9J1914	BUSHING	4	
5P2672	SEAL, LIP	8	
3E6756	SEAL, LIP	4	